

## Removing and Maintaining Your FlexScreens

Regular maintenance is key to ensuring the longevity and effectiveness of your FlexScreen. Periodically remove the screen for cleaning. To remove your FlexScreens, follow these steps:

**Step 1:** Gently press on the center of the screen until you can wrap your hands around the sides of the FlexScreen frame. Squeeze both sides inward 4"-6".

**Step 2:** While keeping the sides compressed, lift the screen and remove one of the bottom corners from the screen track.

**Step 3:** Remove the opposite bottom corner from the screen track, compressing the side a bit more if necessary.

**Step 4:** With both bottom corners out of the screen track, pull the screen down from the top and remove it.

To clean, you can rinse the screens off with a hose or wash them with mild soap and water. Avoid using harsh chemicals or abrasive materials that could damage the screen.

Installing FlexScreen is a simple, rewarding project that enhances your home's functionality and aesthetic appeal. By following these straightforward steps, homeowners can easily enjoy the benefits, value, and superior performance of this innovative window solution.

